

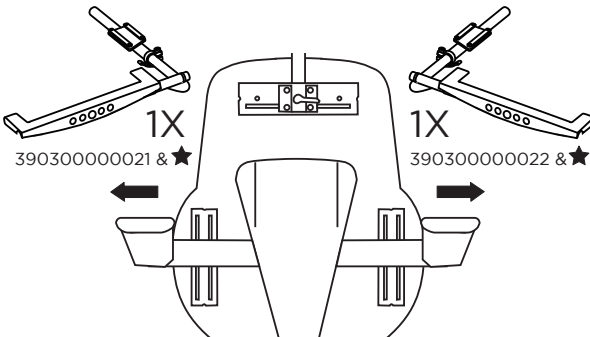
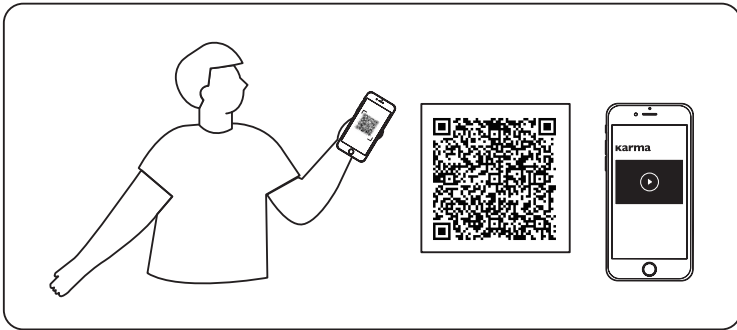


390300000021 & 191000000031-33 & 111600000058
390300000022 & 191000000031-33 & 111600000038
390300000021 & 111800000044/46/47
390300000022 & 111800000044/46/47


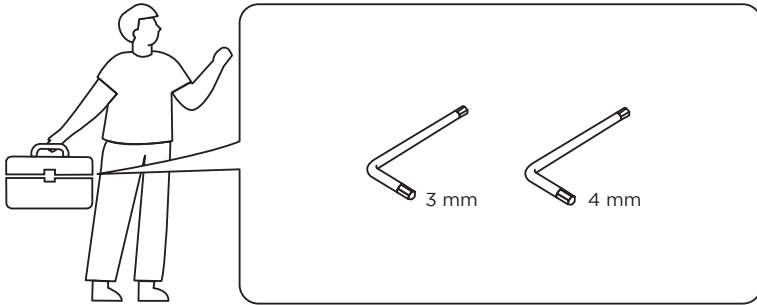


★111600000058/111600000038
& 191000000031-33

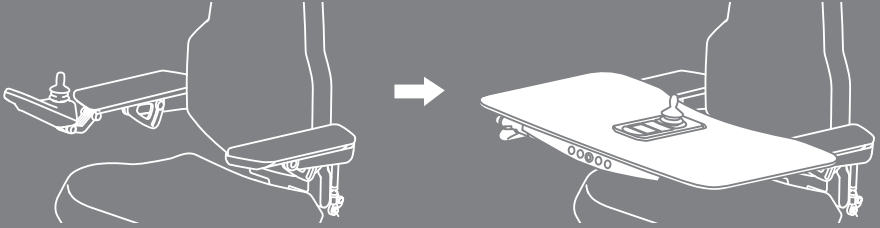


★111800000047/
111800000046/
111800000044




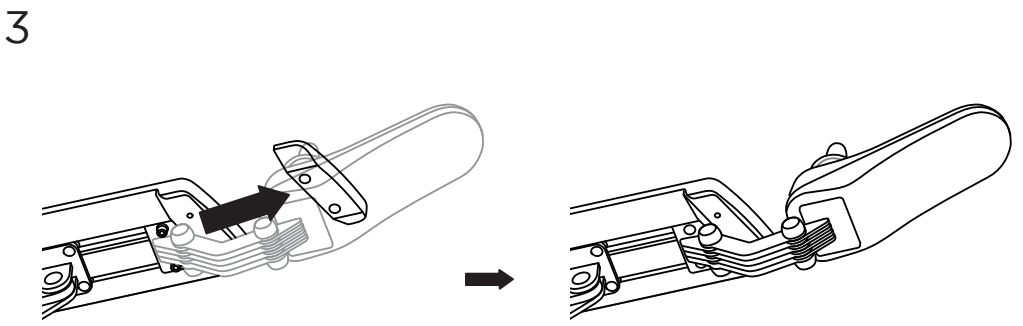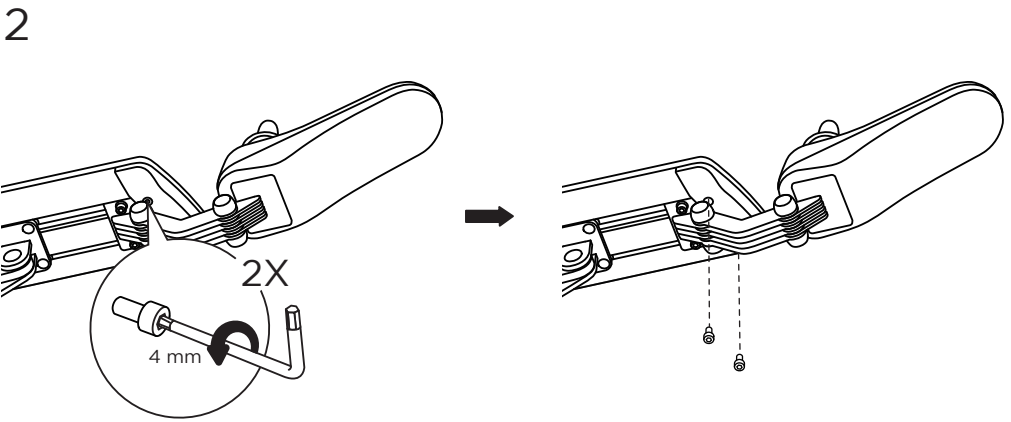


4

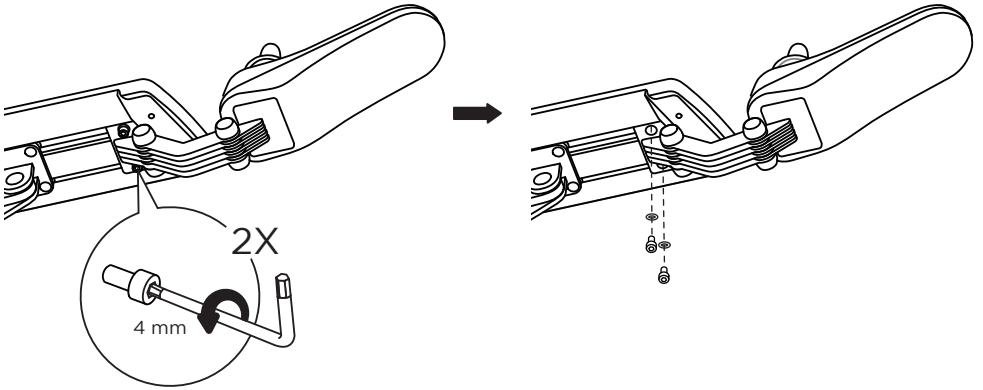


5

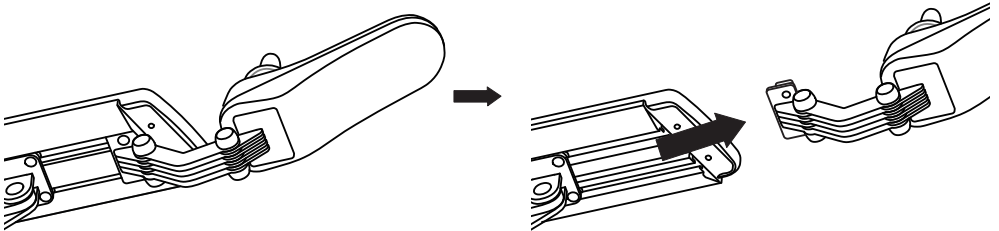


6

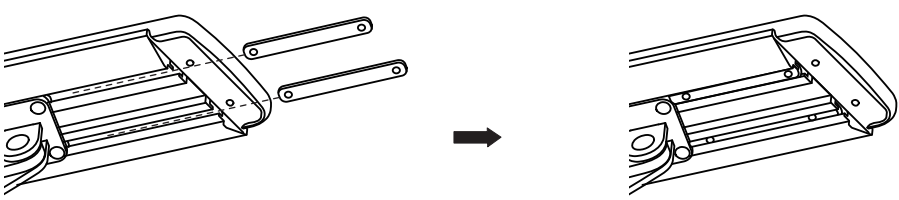


7

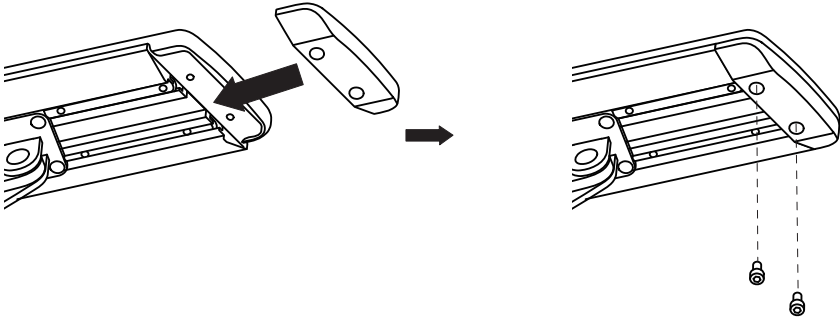


8

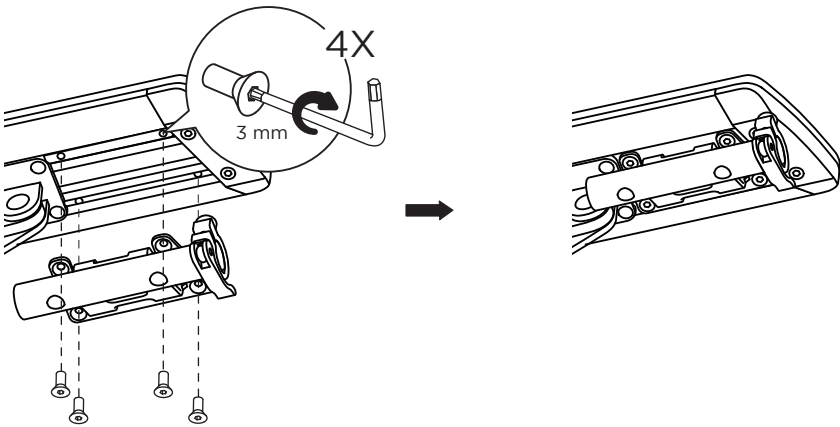


9

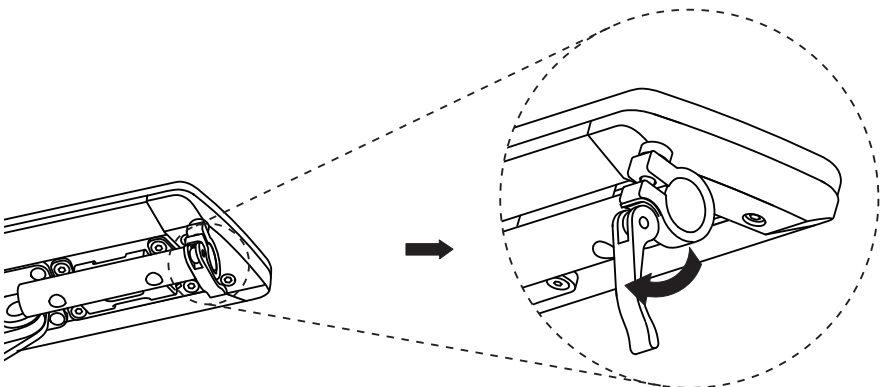

10

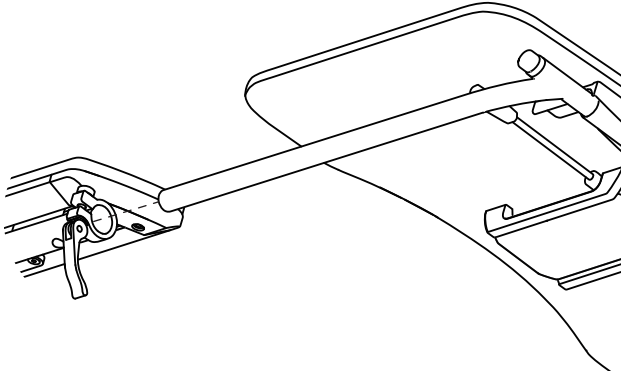

11

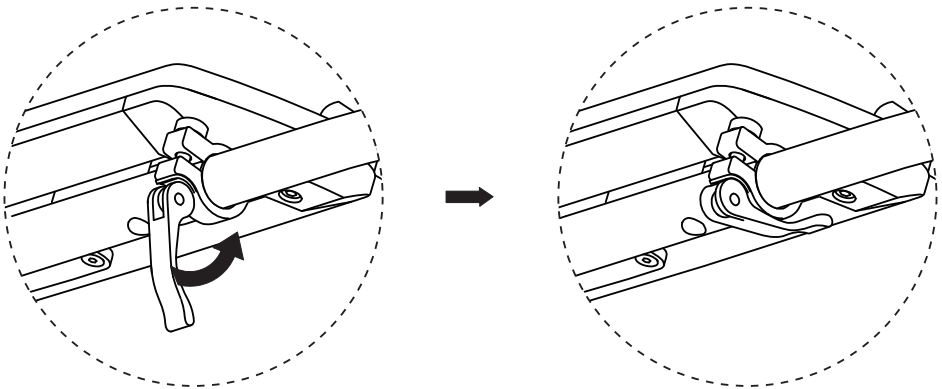

Do not change the programmed driving characteristics of your control unit, as it is specific for the situation of the user. If any adjustment is required because of a change of circumstances, please contact your supplier.